


# RG5000 PARTS DIAGRAM

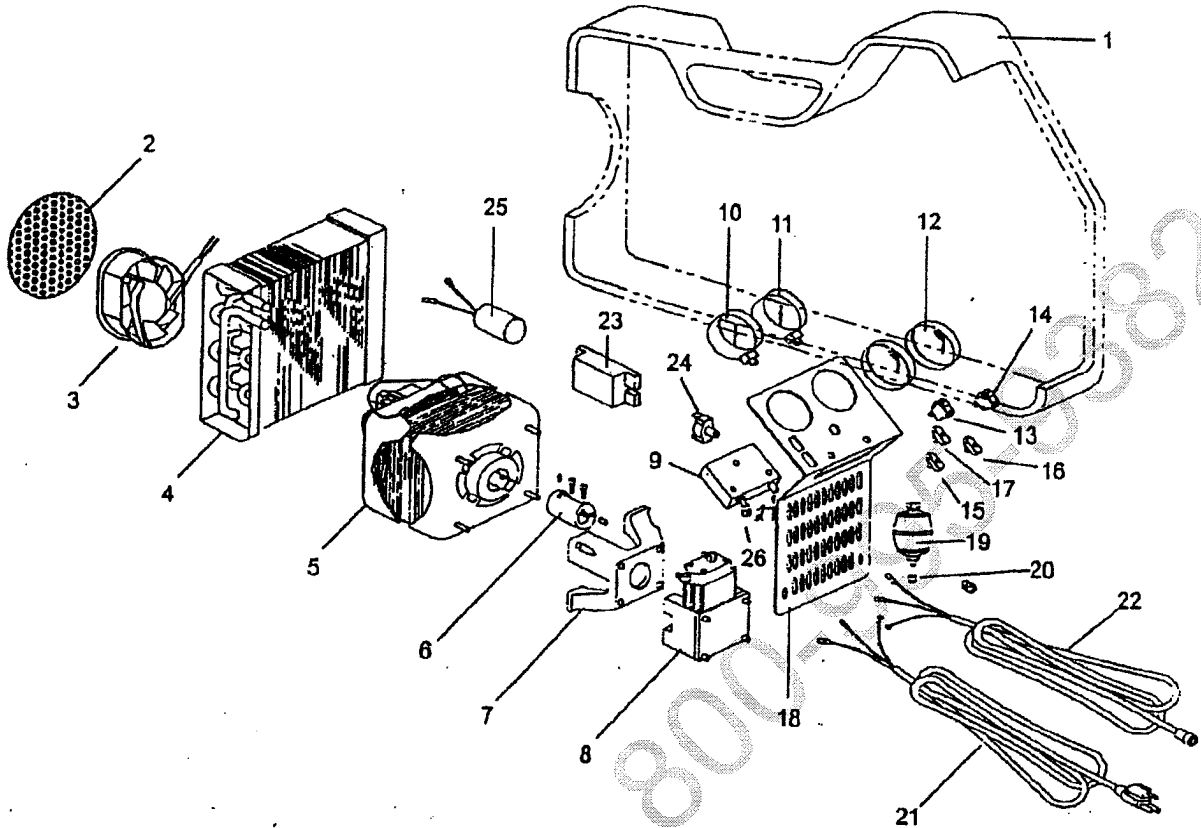

## RG5000 PARTS LIST

Item	Description	Part#	Item	Description	Part #	Item	Description	Part #
1	Plastic Case	MC5000	10	Input Gauge	GA0350	19	Filter	FL1201
2	Fan Grill	SH5022	11	Output Gauge	GA0500	20	Flare Cap	NB6501
3	Axial Fan	EL1817	12	Gauge Lens	GA1000	21	Cord Set	WR2002
4	Condenser	CD1201	13	On/Off Switch	EL1310	22	*Sensor Cord	EL1420
5	Motor	EL1821	14	Start Switch	EL1309	23	*Relay	EL1500
6	Coupler	CP1315	15	Blue Knob	HA1091	24	Pressure Switch	EL2800
7	Bell Housing	CP1001	16	Red Knob	HA1092	25	Capacitor	EL1412
8	Compressor	CP1320	17	Black Knob	HA1090	26	Swivel-Coupler	MF1275
9	Manifold Only	659940	18	Front Panel	SH5025	27	Flare Fitting	MA1015

## REPLACEMENT KITS & ACCESORIES

PART#	DESCRIPTION
KT3302	PISTON SEAL REPLACEMENT (middle section of compressor)
KT3303	VALVE REPLACEMENT KIT (top section of compressor)
KT3307	COMPRESSOR REPAIR KIT (all three sections of compressor)
KT3308	SHAFT REPLACEMENT KIT (bottom section of compressor)
KT5001	80% CAPACITY TANK SENSING KIT